

ECU Manual for:

Bosch MSE 8.0



To scan this ECU download HUD ECU Hacker

<https://netcult.ch/elmue/HUD ECU Hacker>

No responsibility is taken for the correctness of the information

ECU Connector



1	Oxygen Sensor Heater Output
2	IACV Stepper Motor phase A
3	Vehicle Speed Sensor Input
4	12 Volt permanent (from Battery)
5	Crankshaft Position Sensor A Input
6	Crankshaft Position Sensor B Input
7	Power Ground
8	Intake Pressure Sensor Input
9	Engine Speed Signal Output
10	Power Ground
11	Ignition Coil Output
12	Fuel Injector Output
13	IACV Stepper Motor phase D
14	Neutral Switch
15	5 Volt Output for sensors
16	CAN Bus Low
17	CAN Bus High
18	Engine Malfunction Light (MIL) Output
19	Headlight Relay Output
20	Oxygen Sensor Signal Input
21	Throttle Sensor Input
22	Not Used
23	Carbon Canister Valve (EVAP) Output
24	IACV Stepper Motor phase C
25	IACV Stepper Motor phase B
26	12 Volt over Ignition Switch
27	Sensor Ground
28	Fuel Pump Relay Output
29	Main Relay Output
30	Roll Over Switch Input
31	Side Stand Switch Input
32	Engine Temperature Sensor Input